



Network Video Recorder(NVR) Quick Setup Guide

Precautions

Fully understand this document before using this device, and strictly observe rules in this document when using this device. If you install this device in public places, provide the tip "You have entered the area of electronic surveillance" in an eye-catching place. Failure to correctly use electrical products may cause fire and severe injuries.

	WARNING It alerts you to moderate dangers which, if not avoided, may cause minor or moderate injuries.
	CAUTION It alerts you about risks. Neglect of these risks may cause device damage, data loss, device performance deterioration, or unpredictable results.
	NOTE It provides additional information.

WARNING

- Strictly observe installation requirements when installing the device. The manufacturer shall not be held responsible for device damage caused by users' non-conformance to these requirements.
- Strictly conform to local electrical safety standards and use power adapters that are marked with the LPS standard when installing and using this device. Otherwise, this device may be damaged.
- Use accessories delivered with this device. The voltage must meet input voltage requirements for this device.
- If this device is installed in places with unsteady voltage, ground this device to discharge high energy such as electrical surges in order to prevent the power supply from burning out.
- When this device is in use, ensure that no water or any liquid flows into the device. If water or liquid unexpectedly flows into the device, immediately power off the device and disconnect all cables (such as power cables and network cables) from this device.

- If this device is installed in places where thunder and lightning frequently occur, ground the device nearby to discharge high energy such as thunder strikes in order to prevent device damage.

CAUTION

- Avoid heavy loads, intensive shakes, and soaking to prevent damages during transportation and storage. The warranty does not cover any device damage that is caused during secondary packaging and transportation after the original packaging is taken apart.
- Protect this device from fall-down and intensive strikes, keep the device away from magnetic field interference, and do not install the device in places with shaking surfaces or under shocks.
- Clean the device with a soft dry cloth. For stubborn dirt, dip the cloth into slight neutral cleanser, gently wipe the dirt with the cloth, and then dry the device.
- Do not jam the ventilation opening. Follow the installation instructions provided in this document when installing the device.
- Keep the device away from heat sources such as radiators, electric heaters, or other heat equipment.
- Keep the device away from moist, dusty, extremely hot or cold places.
- If the device is installed outdoors, take insect- and moisture-proof measures to avoid circuit board corrosion that can affect monitoring.
- Remove the power plug if the device is idle for a long time.

Special Announcement

- All complete products sold by the manufacturer are delivered along with nameplates, quick setup guide and accessories after strict inspection. The manufacturer shall not be held responsible for counterfeit products.
- The manufacturer will update this manual according to product function enhancement or changes and regularly update the software and hardware described in this manual. Update information will be added to new versions of this manual without prior notice.
- This manual may contain misprints, technology information that is not accurate enough, or product function and operation description that is slightly inconsistent with the actual product, the final interpretation of company is as a standard.
- This manual is only for reference and does not ensure that the information is totally consistent with the actual product. For consistency, see the actual product.

NOTE

For more information, please refer to website.

1 Open Package Examination

Open the package, check the appearance of product for no obvious damage, and confirm the item list for table 1-1 is consistent.

Table 1-1 Packing list

Component	Quantity	Remark
Network Video Recorder	1	
Quick Setup Guide	1	
Mouse	1	
Power adapter	1	Optional
Power cord	1	
Phillips head screw	12	
Terminal block	2	Optional

2 Device Structure

2.1 Device Ports

NOTE

Different devices may have different ports and multi-head cables; Please refer to the actual product.

Front panel description of device, please refer to table 2-1.

Table 2-1 Front panel description

Port Name	Description
PWR Indicator	When the NVR is operating, the PWR indicator is steady on. When the NVR is shut down, the PWR indicator is turned off.
HDD Indicator	Hard disk status indicator. This indicator flashes when data is transmitted.
PoE Indicator	PoE network status indicator. This indicator flashes when data is transmitted.
MOUSE	Support connection to a USB mouse.
BACKUP	Support connection to a USB flash drive or USB removable hard disk.

Rear panel description of device, please refer to table 2-2.

Table 2-2 Rear panel description


Name	Description
WAN/LAN	RJ 45 10/100/1000 Mbps adaptive Ethernet interface. WAN is deployed default gateway and used for external network. LAN is used for internal network.
AUDIO OUT/ AUDIO IN	Audio output / Audio input
VGA	Video output interface
HDMI	Video output interface
Alarm I/O	Alarm input/Alarm output
DC 12V	Connected to an external power adapter
	Power switch
	G, ground

2.2 Device Dimensions

NOTE

Different devices may have different dimensions; Please refer to the actual product.

 Figure 2-1 Dimensions (Unit:mm)

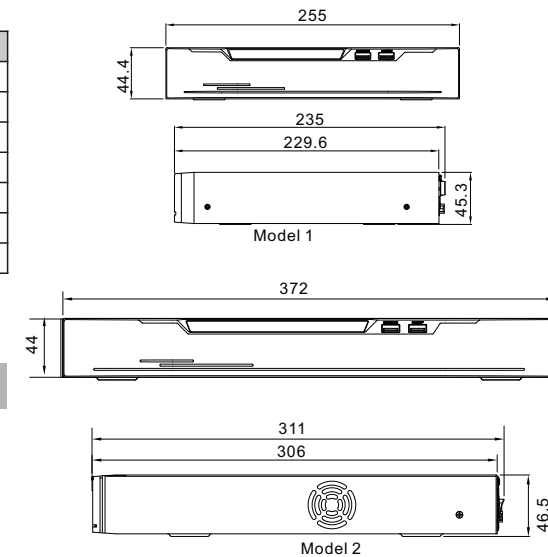


3 Device Installation

The hard disk of the NVR must be provided by the user. Take the following steps to install the hard disks:

- Step 1 Remove the screws for fixing the cover and take down the cover.
- Step 2 Take out the screws and mount two of them to the screw holes of hard disk, as shown in figure 3-1.

 Figure 3-1 Installing the hard disk screws



NOTE

- Just screw the screws about 1 to 2 turns instead to the end.

- Step 3 Route the screws through the gourd holes on the base, push the hard disk to the appropriate position on the left, as shown in figure 3-2.
- Step 4 Turn the device over, and mount other two screws to the holes, as shown in figure 3-3. Then fasten all the screws.

Figure 3-2 Installing hard disk


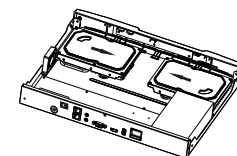 


Figure 3-3 Fixing hard disk

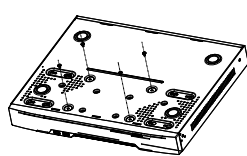 

- Step 5 Install another hard disk following step 2, step 3 and step 4, and insert the hard disk data cable and power cable, then replace the upper cover and fasten the fixing screws.

4 Device Operation

4.1 Startup

Before starting NVR, ensure that the NVR is connected to a power supply properly and a monitor is connected to the HDMI or VGA interface of the NVR correctly. After starting the NVR, there is a login window located in the center, as shown in figure 4-1 and 4-2.

CAUTION In some environments, if the power supply is abnormal, the NVR may not work properly. In severe cases, the NVR may be damaged. In these environments, you are advised to use regulated power supply.

Figure 4-1 Activation interface


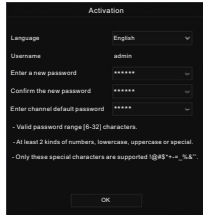 


Figure 4-2 Login interface

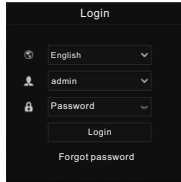 


NOTE User needs to create a new password to activate the device, when logging in at first time. User can also set pattern unlock to quickly login. Set security questions to recovery password. Change the language at logging in interface.

4.2 Topology of the NVR

A free network includes other network devices in addition to IP camera and NVR. The topology of a free network can be organized freely so long as NVR and IP camera can communicate with each other smoothly. For the topology refer to figure 4-3

 Figure 4-3 Topology of the NVR

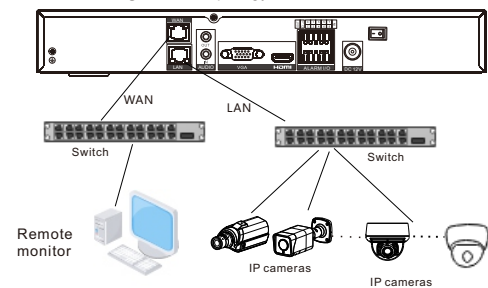

4.3 Power off

Enter the path **Main Menu > System > Maintenance > Shutdown** to power off the NVR.

NOTE Before replacing the hard disk, the power must be turned off.

5 Quick Configuration


Plug in power to access the NVR user page. The wizard window would show at first time. The user can configure quickly or close immediately. The configuration details please refer to main menu. Use the mouse to right-click any where on the main interface to access the main menu. Main menu comprises Channel, Record, Alarm, Network and System settings, as shown in figure 5-1.

5.1 Channel

Channel settings contain Camera, Encode, Image, OSD, Privacy Zone.

- Camera:** user can add cameras automatically by clicking **Click to Add**, and add manually by clicking **Add**. Tick cameras then click **Delete** to delete cameras. User can batch update software.
- Encode:** set stream information, encode type, resolution, frame rate, bit rate control and bitrate from drop lists for different channels.

 Figure 5-1 Main menu

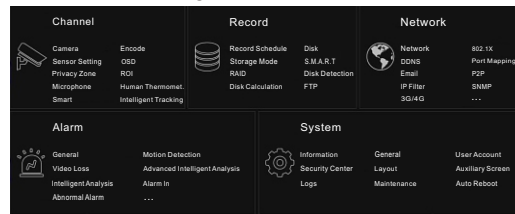

- Sensor Setting:** adjust image parameters and user can set sensor parameter.
- OSD:** customize time and channel name displaying in the live video page.
- Privacy Zone:** set a privacy zone by clicking and dragging cursor and double-click an exist private area to delete it. Support up to 4 zones.
- ROI:** region of interest.
- Microphone, human thermometer, smart, and intelligent tracking** are used for some channels' cameras, not for all.
- Some of these settings can be copied to other channels by clicking **copy** button.

5.2 Record


Record settings contain Record Schedule, Disk, Storage Mode, S.M.A.R.T, RAID, Disk Detection, Disk Calculation, and FTP.

- Set **record schedule** and storage strategic.
- Enter SMART interface to view the state of disks. Disk detection can detect the disks.
- RAID:** keep the recording safety, make RAID for at least two disks
- FTP:** File Transfer Protocol, set the parameters and it will send alarm message to the FTP path.

5.3 Alarm

Alarm settings contain General, Motion Detection, Video Loss, Advanced Intelligent Analysis, Intelligent Analysis, Alarm In, Abnormal Alarm, Alarm Out and Local Intelligent Analysis as shown in figure 5-2.

 Figure 5-2 Alarm

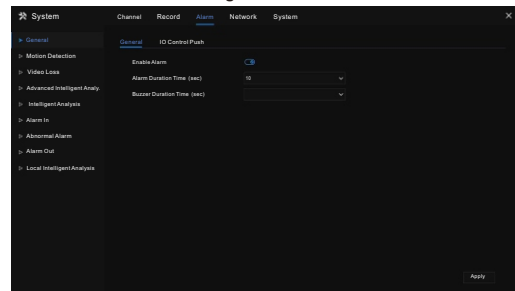


- General:** enable or disable alarm and set duration time of alarm. set the IO control push parameters.
- Motion Detection:** enable this function, if detection the motion actions, it will alarm.
- 1.Event actions:** contain buzzer, alarm out, push message to App, pop-up message to monitor, send E-mail and post recording (after enabling, choose the recording time from drop list.)
- 2.Area:** set motion detection area. Press left button and drag the cursor to add a detection area ,and double-click an area to delete it.
- 3.Schedule:** set schedule to enable or disable motion detection alarm. There are three methods to set, click the double arrows button to choose all day .The second, click and drag the cursor to select periods. The third, click one by one.
- Video Loss , Advanced Intelligent Analysis, and Intelligent Analysis** are same settings as motion detection.
- Alarm In:** settings for I/O alarming.
- Abnormal Alarm** can tick disk error, IP conflict, network disconnected.
- Local Intelligent Analysis:** choose the channels (it up to 4 channels) to set local intrusion.

5.4 Network

Network settings contain Network, 802.1X, DDNS, Port Mapping, E-mail, P2P, IP Filter, SNMP, 3G/4G, PPPoE, PoE Status, Network Traffic and Platform Access, as shown in figure 5-3. Maybe some models have more functions; Please refer to the actual product.

 Figure 5-3 Network

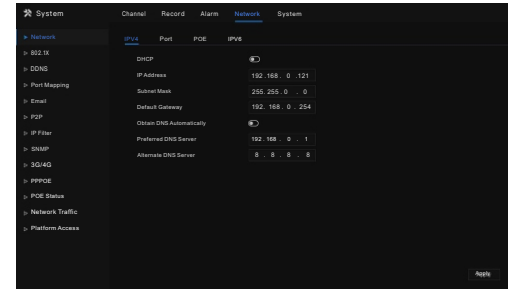


- Network:** set IP and port, you can use the IP to access web interface.
- 802.1X and DDNS** interface can set network transfer protocol parameters.
- Email:** set Emails for sending and receiving alarm messages and password retrieval message.
- Port Mapping:** set the ports for remote accessing.
- P2P:** add NVR into device list of App by accessing the QR code.
- IP Filter:** settings for creating black list or white list.
- SNMP:** There are three versions of simple network management protocol at interface
- 3G/4G:** use 3G/4G modem plug to NVR provide the network.
- PPPoE:** point to point network to access NVR directly.
- Network traffic: view the status and rate of network.
- Platform Access:** enable, the platform and NVR are not at the same local network, platform can manage the NVR by active registration, they need to connect to the external network server in advance.

5.5 System

System settings contain Information, General, User Account, Security, Layout, Auxiliary Screen, Logs, Maintenance and Auto Reboot, as shown in Figure 5-4.

 Figure 5-4 System

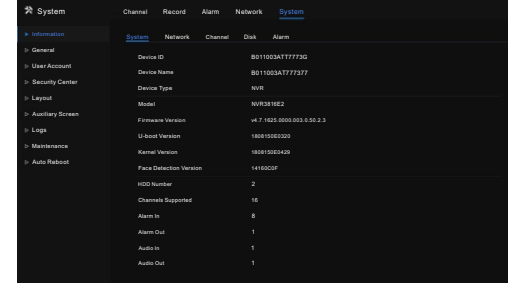

- Information:** show the general information of the device, includes system, network, channel, disk and alarm
- General:** include system, date and time, time zone, DST and Sync camera time.
- User Account:** add user, set advance setting(auto login, password double authentication, boot wizard), and App verification.
- Security Center:** modify the password, set pattern unlock, secure Email and secure question.
- Layout:** settings for sequencing view of the channels.
- Logs:** shows operating and alarm log, user can export logs if an USB disk is plugged in.
- Auxiliary Screen:** use two monitor screen to show live video of channels.
- Maintenance:** include shutdown, reboot, logout, reset, import configuration, export configuration and FW update, cloud update, and save running log.
- Auto Reboot:** enable this function to make device restart periodically.

5.6 Live Video

Live video page is showed after starting the NVR by default, as shown in figure 5-5.


Figure 5-5 Live video



6 Mobile Client

Search for "InView Pro4" in App Store or Google Play to download and install the mobile client. Use the App to scan the QR code on the back board of NVR, or in P2P settings page in NVR user interface. Then input the password of the NVR to add the NVR into the device list of the App. User can manage the device through mobile client.

 
Figure 6-1 P2P

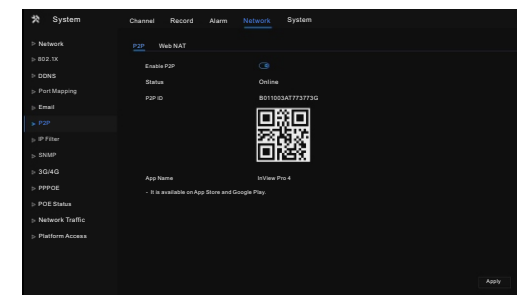

7 Web Accessing

The NVR also can be accessed in a Web browser. Open a web browser like IE and enter the IP address of device (The default IP address is 192.168.0.121) in the address box, and press **Enter**. The login page is displayed as shown in figure 7-1.

 Figure 7-1 Login

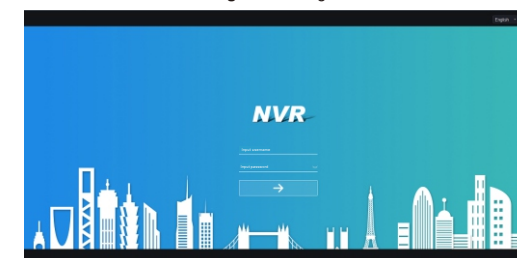

NOTE

The user name and password are same as the UI interface.