

Quick Setup Guide

Network Video Recorder (NVR)

Version:1.0

1 Packing List

Accessory specifications may vary by country or region. Please refer to the actual product you receive.



Network Video Recorder (NVR) x1



Quick setup guide x1



Power Cord x2



Mouse x1



Alarm block x8



HDD snap fit x32



Flat head screws x64



Key x2



Screw x2




Nut x2


2 Device Port

NOTE

Different devices may use different types of ports. The diagram is for reference only, please refer to the actual application scenario.

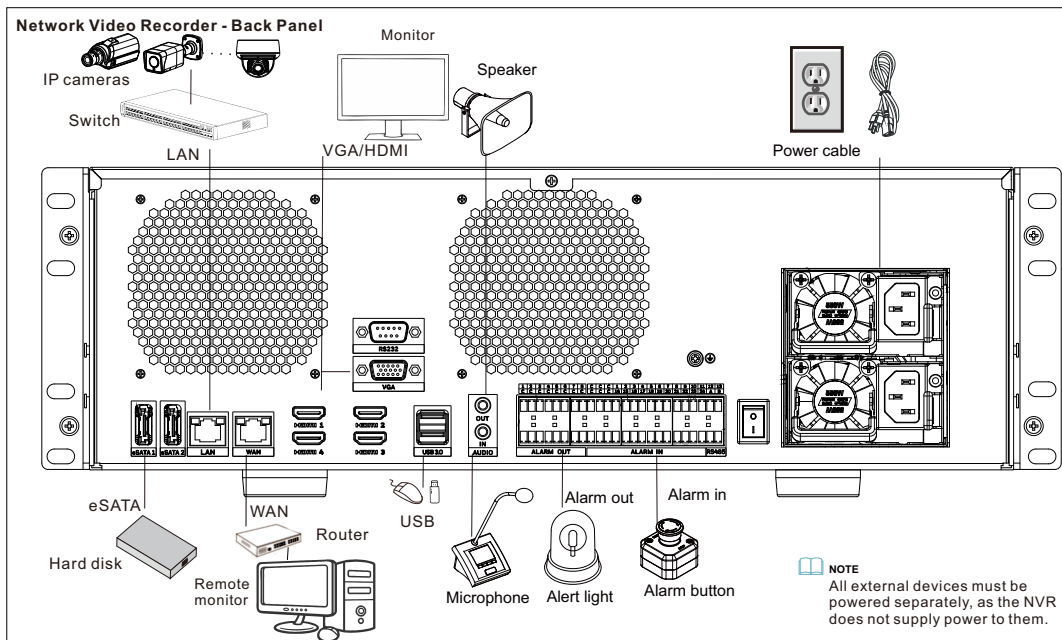

Network Video Recorder - Front Panel

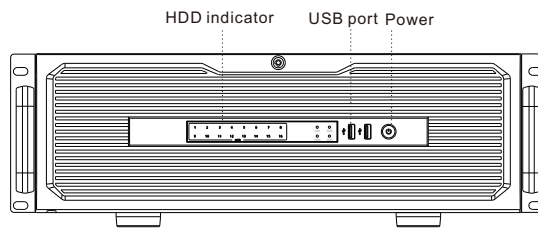

Indicator:
LAN: Green light is on, running normal.

Run: The device working normal, it light is on.

WAN: Green light is on, running normal.


Power: Power on, green light is on.

When the hard disk is recording, the HDD light flashes.
The HDD light is on, it means the disk is normal, but is not recording.

3 Device Dimension


NOTE

Device dimensions may differ across models. The illustrations provided are for reference only.

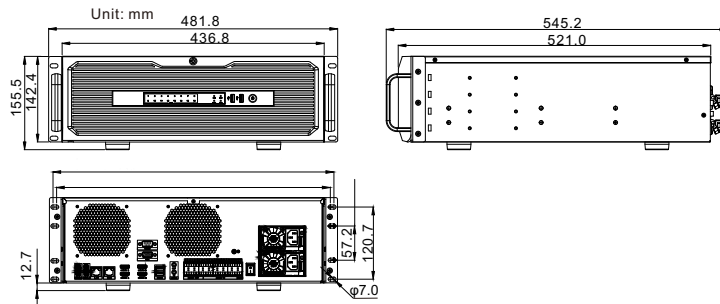


4 Install Hard Disk


1

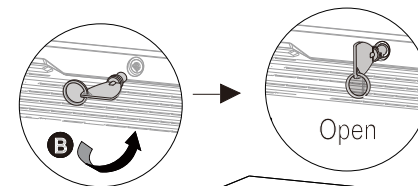


2

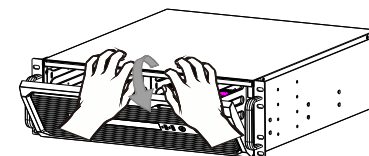


3

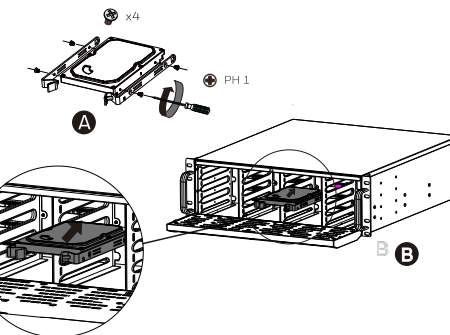


4

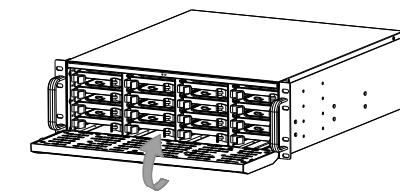


5

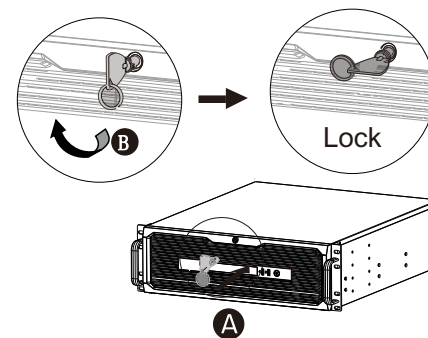


6

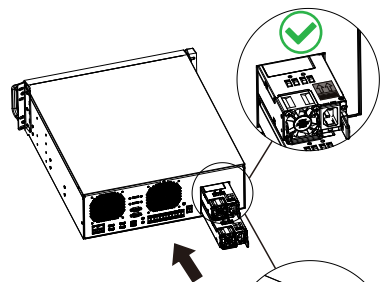


7

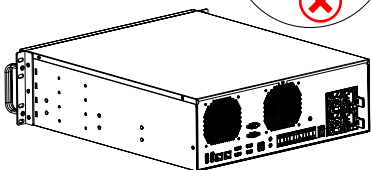


8

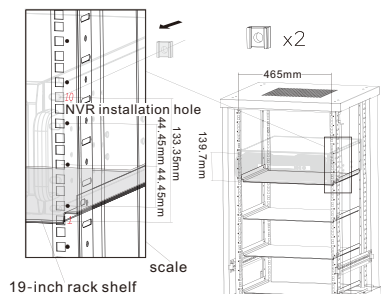

9

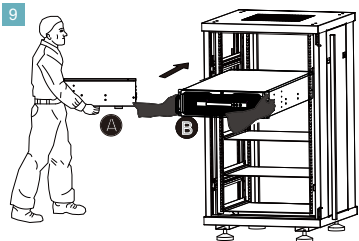

10

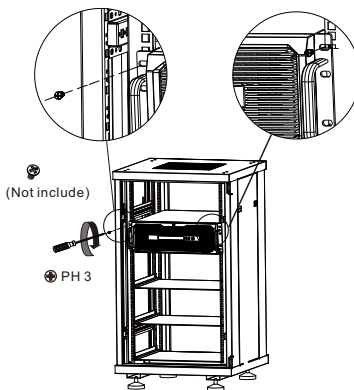

5 Login

1. Ensure the NVR is properly connected to a power supply and that a monitor is correctly connected to the NVR via the HDMI or VGA interface.
2. When powering on the device for the first time, you must activate it.
3. The default username is **admin**.
 - Enter a new password and confirm it.
 - Then enter the **channel default password**, which allows for quick addition of cameras to the NVR.
 - Click **OK** to proceed to the **Pattern Unlock** setup page.

Activation

Language

English

Username

admin

Enter a new password

Password

Confirm the new password

Password

Enter channel default password

Password

--Valid password range (6-32) characters.

--At least 2 kinds of numbers, lowercase, uppercase or special.

--Only these special characters are supported (@#\$%+-_=%&'").

OK

Login

English

admin

Login

Pattern Unlock

Forgot password

4. On the main screen, right-click to open the settings menu as shown in the figure.
5. Set the **Pattern Unlock**. If you do not wish to set a pattern, click **"Skip this step"**.
6. Set your **Email** and **Security Questions** to enable password recovery.

The setup wizard includes configurations for Network, IPv4 CCTV, Date and Time, Time Zone, DST, Camera, Disk, P2P, and Resolution.

For P2P: Search for "InView Pro 5" in the App Store or Google Play to download and install the mobile client. Use the app to scan the QR code located on the back panel of the NVR or found on the P2P settings page within the NVR user interface. Then enter the NVR's password to add the device to the app's device list. You can manage the NVR directly through the mobile client.

Email for recovery user password

Email Address

*****@gmail.com

OK

Skip this step

Question (Recovery the password)

Question one

The brand and model of

Question one answer

Your favorite team

Question two

Your favorite city

Question three

Your favorite city

Question three answer

- Please enter at least 1 characters for the answer


- Please enter up to 32 characters for the answer

OK

Skip this step

6 UI Settings

On the main page, right-click to open the settings page, as shown in the figure.

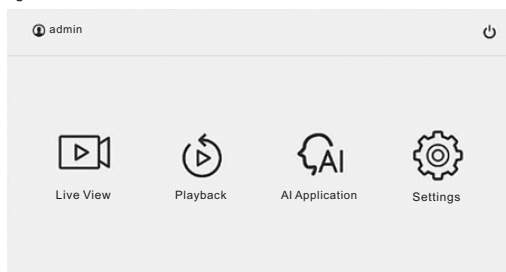

Live View: Click to access the real-time video stream.

Playback: Used to play back recorded video, including fixed-point playback or playback based on search criteria.

AI Application: In the AI Application interface, you can configure **Smart Search** and manage the **Archives Library**.

Settings

Select the Settings menu to configure Channel, Speaker, Record, Event, IVS, Network, and System options.

Channel: Camera, Encode, Image, OSD, Privacy Zone, ROI, Audio, and Intelligent Tracking.

Speaker: Speaker Management, and Local Audio File.

Record: Record schedule, Disk, Storage Mode, S.M.A.R.T, Disk Detection, Disk Calculation, and FTP.

Event: General, Motion Detection, Video Loss, Alarm In, Abnormal Alarm, and Alarm Out.

IVS: AI Multi-Target, Intelligent Analysis, Behavior Analysis, ES Analysis, Face Recognition, LPR, and Local Intelligent Analysis.


Network: Network, 8012.1X, DDNS, Port Mapping, Email, P2P, IP Filter, SNMP, 3G/4G, PPPOE, POE Status, Network Traffic, Platform Access, and Failover.

System: Information, General, User Account, Security Center, Layout, Auxiliary Screen, Logs, Maintenance, and Auto Reboot.

System	Channel	Speaker	Record	Event	IVS	Network	System
Information	System	Network	Channel	Disk	Alarm		
General	Device ID						
User Account	Device Name						
Security Center	Device Type						
Layout	Model						
Auxiliary Screen	Firmware Version						
Logs	UI-Spot Version						
Maintenance	Kernel Version						
Auto Reboot	UUID Number						
	Channels Supported						
	Alarm In						
	Alarm Out						
	Audio In						
	Audio Out						

NOTE
The specific functions may be related to the models, please refer to your actual product.


Real-time Left-click Menu

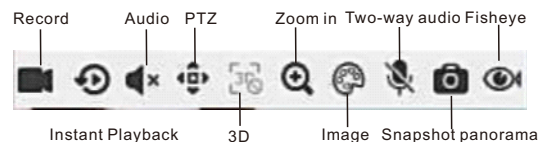

7 Web Accessing

Open the Chrome browser and enter the NVR's IP address (default: 192.168.0.121) into the address bar, then press Enter.

The web interface provides the same functionality as the NVR's local user interface (UI).

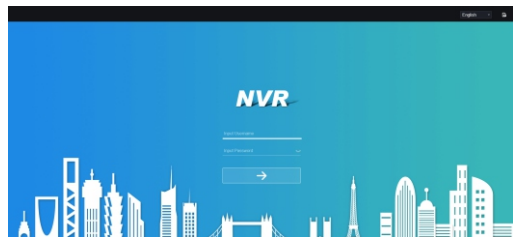

NOTE
For more detailed information, please refer to the full user manual.

Precautions

Before using this device, thoroughly read and understand this document, and strictly follow all the guidelines provided. If the device is installed in a public area, a clearly visible notice—"You have entered the area of electronic surveillance"—must be displayed. Improper use of electrical products may result in fire or serious injury.

WARNING	Indicates a medium or low potential hazard that, if not avoided, could result in minor or moderate injury.
CAUTION	Indicates a potential risk that, if not avoided, could result in property damage, data loss, reduced performance, or unpredictable outcomes.
NOTE	Provides supplementary information to highlight or reinforce key points in the main text.

- WARNING**
 - Strictly comply with local electrical safety standards and use power adapters marked with the LPS (Limited Power Source) standard when installing and operating this device. Failure to do so may result in device damage.
 - Follow all installation requirements carefully. The manufacturer is not liable for any device damage caused by failure to adhere to these requirements.
 - Only use the accessories provided with this device. Ensure that the power supply voltage meets the device's input voltage specifications.
 - If the device is installed in locations with unstable voltage, ensure it is properly grounded to discharge excess energy, such as electrical surges, and prevent damage to the power supply.
 - Do not expose the device to intense light sources (e.g., light bulbs or direct sunlight), as this may reduce the lifespan of the image sensor.
 - Prevent liquids from entering the device. If any liquid accidentally flows into the unit, immediately power it off and disconnect all cables (including power and network cables).
 - In areas prone to thunder and lightning, ground the device nearby to safely discharge high-energy surges, such as lightning strikes, to avoid damage.

- CAUTION**
 - Avoid heavy loads, strong vibrations, and exposure to moisture during transportation and storage to prevent damage.
 - The warranty does not cover any damage resulting from secondary packaging or transportation after the original packaging has been removed.
 - Protect the device from falls and strong impacts.
 - Keep it away from magnetic interference and do not install it in locations prone to shaking or mechanical shocks.
 - Clean the device using a soft, dry cloth. For stubborn dirt, use a cloth lightly moistened with a mild neutral cleaner, then gently wipe and dry the surface.
 - Do not block the ventilation openings.
 - Always follow the installation guidelines provided in this document to ensure proper airflow and device safety.
 - Keep the device away from heat sources such as radiators, electric heaters, and other heat-emitting equipment.
 - Avoid installing the device in environments that are damp, dusty, extremely hot or cold, or exposed to strong electromagnetic radiation.
 - If the device is installed outdoors, take proper insect-proof and moisture-proof measures to prevent circuit board corrosion that could affect system performance.
 - If the device will remain idle for a long period, remove the power plug to ensure safety.
 - Before unpacking the product, inspect the fragile sticker. If the sticker is damaged, contact customer service or your sales representative immediately.
 - The manufacturer is not responsible for any artificial damage to the fragile sticker.
 - Ensure adequate ventilation to prevent overheating.
 - Do not install or disassemble the device in extreme environments including high humidity, high salinity, dust, extreme temperatures, or corrosive atmospheres.

Special Announcement

- All complete products sold by the manufacturer are supplied with nameplates, a quick setup guide, and accessories, and are subject to rigorous inspection prior to delivery.
- This manual is subject to updates in accordance with product feature enhancements or modifications.
- Software and hardware described in this manual may be updated regularly. Update information will be reflected in subsequent versions of this manual without prior notice.
- This manual is for reference only and may contain typographical errors, technical inaccuracies, or minor discrepancies between product functions and operations described versus those of the actual product.
- In the event of any inconsistencies, the actual product shall take precedence and the final interpretation rests with the company.